

SE-0304 BAG PROTECTOR ALERT

Protect any bag or valuable with this motion sensor alarm

BATTERY INSTALLATION:

- Loosen the screw and open the battery cover.
- Follow the polarity instructions to install 2 x CR2032 lithium batteries (included).
- Replace the battery cover and tighten the screw.

HOW TO SET THE PERSONAL CODE:

- After installing 2 x CR2032 batteries, the red LED light will flash continuously.
- Choose a 4-digit code and enter it. DO NOT include "S" in your code. ONLY use digits 1, 2, and 3.
- After pressing the selected 4-digit code, 4 beeps will sound and the red LED light will stop flashing. At this point the code has been successfully set. There are 81 possible codes.

HOW TO CHANGE/UNSET THE PERSONAL CODE :

- Make sure the alarm is disarmed.
- Press "S" and the current 4-digit code.
- You will see the red LED light flash continuously.
- Press a new 4-digit code and 4 long beeps will sound to indicate that the new 4-digit code is successfully set.
- If the new 4-digit code is not keyed-in within 5 seconds, it will not be successfully set and you will need to restart the change/unset code process again.

HOW TO ARM/DISARM THE ALARM:

- Press "S" twice and you will see the red LED light flash for 5 seconds. The Alarm will then be ARMED.
- If you press "S" & the correct 4-digit code, you will hear 3 beeps indicating that the Alarm has been disarmed successfully.
- If the incorrect code is keyed-in, 2 brief warning beeps will sound. At this point, you can enter the correct 4-digit code without pressing "S".

HOW TO USE THE ALARM:

- After arming the alarm, the unit will be able to detect vibrations and/or movements of your belongings. A "Beep-Beep" sound will alert users that someone is moving the alarm. If the vibration/movement stops within the next 3 seconds, the unit will return to ARMED mode.
- If the unit continuously detects two or more vibrations/movements within that same 3 second period, the alarm will sound for 20 seconds.
- Follow the above instructions to DISARM the alarm.

HOW TO USE AS AN EMERGENCY ALARM:

- Pull out the pull-pin at the top of the unit. The alarm will be activated immediately.
- Re-insert the ripcord and the alarm will stop.
- The Emergency Alarm function can be triggered at any time.

NOTES:

- While in DISARMED mode, one beep every 20 seconds indicates that the battery is weak and should be replaced.
- You must enter the code within the 5-second time limit or the alarm will automatically revert to the preexisting code.
- If your 4-digit code is incorrectly keyed-in 3 times in a row, the alarm will sound automatically.
- When pressing buttons on the Alarm, a beep must be audible after each button selection. If a beep is not heard, the button has not been properly entered.
- While this is a water resistant product, it is NOT to be used in the rain, underwater, or in extremely wet conditions.
- Ensure the unit has good battery power to operate as a security guard. Check its power level periodically.

WARNING:

The high pitched alarm sound may injure hearing if in close proximity to the ears. This alarm contains small parts and is not suitable for children.

QUICK ALARM GUIDE:

Set Code: S + 4-digit code

Reset Code: 1. S + original 4-digit code

2. Key in new 4-digit code within short period time

To Activate the Alarm: S + S

To Deactivate the Alarm: S + correct 4-digit code

Low Battery Indicator: Beeps at each 20-second interval

DISCLAIMER:

All Doberman Security items are strenuously tested by our experienced R&D teams. Doberman, however, does not guarantee that this item will prevent all theft and/or attacks from occurring. This item is only meant to act as an alarm in emergency situations.

LIMITED WARRANTY COVERAGE:

If your product does not work properly because of a defect in materials or workmanship, Doberman will, for the length of the period as follows, which starts with the date of original purchase ("warranty period"), replace it with a new or a refurbished product.

Product	Parts	Services
All Doberman Brand Products	Ninety (90) Days	Mail-in

During the parts warranty period, there will be no charge for Parts. You must first email acquiring a RMA number, and then mail-in your product during the warranty period. This warranty only applies to products purchased and serviced in U.S.A./CANADA

The warranty is extended only to the original purchaser of a new product, which was not sold "as is". A purchase receipt or other proof of the original purchase is required for warranty service.

For assistance in U.S.A./CANADA, please visit our Website at: <http://www.dobermanproducts.com> or, send your request by E-Mail to: sales@dobermanproducts.com

LIMITED WARRANTY LIMITS AND EXCLUSIONS:

The Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Doberman, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, miss-adjustment of consumer controls, improper maintenance, power line surge, lighting damage, modification, rental use of the product, serviced by anyone other than a factory service center or other unauthorized service, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". DOBERMAN IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, LOSS OF GOODWILL, PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE EQUIPMENT, DOWNTIME COSTS, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES.

(As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the service provider. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states and/or provinces do not allow the exclusions or limitations of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have others rights which vary from state to state and from province to province. If a problem with this product develops during or after the warranty period, you may contact your dealer or service center. If the problem is not handled to your satisfaction, then write to Doberman's Customer Services Department

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

©2005, Doberman Security Products, Inc.
3002 Dow Avenue, Suite #408
Tustin, CA 92780 USA
Email: customerservice@dobermanproducts.com
Internet: www.dobermanproducts.com